

USB RCA Non-Slip Dancing Step Dance Mat Pad for PC TV AV Video Game



Description:

- USB interface, plug and play.
- RCA interface, support TV/AV game mode.
- Non-slip design, no driver needed.
- 6ft connection cable for more distance.
- 10 buttons, customize your own specialized dance moves.
- Bodybuilding, fitness, tamper, durable wear-resistant.
- Works with: PC and TV.
- Dimensions: 920 x 820 x 3 mm.

How to Use on TV:

- Installation on television: connect the yellow plug (video cable), white plugs (left channel audio line), and red plugs (right channel audio line) on dancing blanket with the corresponding jack on TV, switch the TV to the AV mode, after that, you can connect the power supply with the dance mat then switch on the dance mat, it appears the game screen and enjoy your dancing.

Package Included: 1 x USB / RCA dance pad
4 x double-sided Tape
1 x AC adapter
1 x CD

