

TCL Roku TV Remote Codes

Program Your Cable or Satellite Remote Control to Work with Your TCL Roku TV

In many cases, you can program your cable, satellite or universal remote to control certain functions of your TCL Roku TV. Look for your provider and the remote code from the table below, and use the instructions from your service provider to program your cable and satellite remote.

These codes come from the TV remote cable providers. TCL must rely on these companies to provide their codes. If your code is not listed here please contact your provider.

Note: Not all buttons on your Roku TV remote can be programmed to the buttons on your cable or satellite remote. The level of button support for specific remotes is listed below:

Basic – Power, volume, and input select.

Expanded – Basic button support plus back, home, up, down, right, left, replay, options (or star button), play/pause, reverse scan, and forward scan.

Providers	Codes for TCL Roku TVs	Programming Instructions
Altice USA	1111, 0821, 0001, 3411, 3311, 2801, 4141, 1931, 1661, 1561	Altice USA
ATT U-verse	1346	AT&T
Bright House Cable	387,1756	Bright House
Buckeye Broadband	12434, 2434	Buckeye Broadband
Cable One	2434	
Cablevision / Optimum	031	Optimum
CenturyLink	2414, 2434, 3183	CenturyLink
Charter ²	11756	Charter
Comcast ³	11756, 12434, 12290, 12292	Comcast
Cox Communications	1756, 11756, 12434	Cox
DIRECTV	11756	DIRECTV
DISH Network	1756, 535, 645	DISH Network
Frontier Communications	688	Frontier Communications
General Communications	0031, 0107, 0164, 0004, 0009, 0044, 0054, 0000, 0342, 0003, 0125, 0015, 0022, 0052, 0087	General Communications
Google Fiber	2856	Google Fiber
Hawaiian Telcom	2434	Hawaiian Telcom
ONN	3851	ONN
RCA/Voxx	12434,387, 12049	RCA
Time Warner	387, 1566, 268	Time Warner
TiVo	0091,0366	TiVo

Verizon FIOS	180	Verizon
WOW!		WOW!
Windstream	2414, 2434, 3183	Windstream
XFINITY	11756	XFINITY
GE Universal Remote Model 24922	2891	GE
Logitech Harmony		Logitech
Inteset INT-422	10885	Inteset
Microsoft Xbox One	T1756	Microsoft

¹ Click [here](#) to download a PDF version of the remote codes.

² Follow the instructions [here](#) to deactivate Channel Control Lock.

³ By default, the remote control's channel control capabilities are locked to the Cable Box. This will guarantee that you do not inadvertently change a channel on the Cable Box while in the TV mode. However, you can deactivate Channel Control Lock to allow full access to keys for use with Roku TV. Refer to Xfinity support page for the instructions to deactivate Channel Control Lock.